



## RF-3 Tag Tester



### Specifications

Power	9 Volt Alkaline Battery
Dimensions	3 <sup>1</sup> / <sub>2</sub> "W x 5 <sup>5</sup> / <sub>8</sub> "H x 1 <sup>1</sup> / <sub>4</sub> "D
Operating Temperature	35 to 100 Degrees F
Indicators	1 Green LED, 1 Red LED
Operates @	916 MHZ FM Demodulation

- ◆◆ The microprocessor decodes the digital signal that the tag transmits and turns on the red LED when a valid tag signal is received. ◆◆

### Features

- ◆ A portable hand held device used to test a Series 3 RF Tag for active signal transmission
- ◆ Allows staff to test a Series 3 RF Tag away from a door antenna, on or off of a person
- ◆ The RF-3 Tag Tester LED lights will only illuminate from a WCSI Series 3 RF Tag
- ◆ Made in the USA

### Instructions for Use

- 1) Install a 9 volt battery.
- 2) Hold an RF-3 wander tag four to eight (4-8) inches in front of the tester.
- 3) Press the red (or black) button to test the tag.
- 4) The green LED light on the tester indicates that the battery is operational.
- 5) If the tag is transmitting a signal, the red LED light will blink.
- 6) If the red light does not blink, check the tag signal at a monitored door control unit and antenna system.

- ◆◆ If the tag does not transmit a signal, return to the WCSI Service Center for battery replacement. ◆◆

[www.wandercontrol.com](http://www.wandercontrol.com)

210 Richlandtown Pike ◆ Quakertown, PA 18951  
Telephone 215-538-1983 ◆ After Hours 407-446-0055